


# REPAIR WRAP


## WITH STEEL PUTTY

### INSTANT PIPE REPAIR BANDAGE

- ✓ **Water Activated!**
- ✓ **No Mixing!**
- ✓ **Sets Rock Hard in Minutes!**
- ✓ **No Mess!**

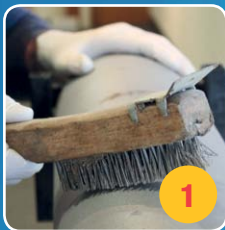


Relieve any pressure in the pipe before commencing. Clean and roughen area to be repaired. Sand or smooth down any sharp protruding edges.

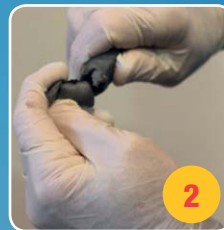

Knead putty until a uniform colour is achieved.




Apply to leak site within two minutes of mixing. Force into any cracks or holes. Repair Wrap must be applied prior to the putty curing (approx. 30 minutes) in order for the putty to adhere to the outer wrap.

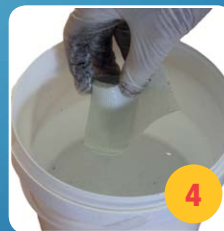

Wearing the enclosed gloves remove the Repair Wrap from the foil pouch and soak the roll in temperate water for 20 seconds.



Using the entire Repair Wrap roll approximately 50mm above the repair area and continue to wrap approximately 50 mm below the repair area. A minimum eight layers recommended.

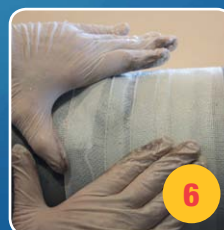

Squeeze and mould Repair Wrap in the direction of the wrap, removing excess water and spreading resin until it is tacky to touch. Allow 30 minutes for resin to set.

DENSO (AUSTRALIA) PTY LTD

411-413 Victoria Street, Brunswick Victoria 3056 | Telephone: + 61 1300 658 590 | Facsimile: +61 3 9387 6973

[www.densoaustralia.com.au](http://www.densoaustralia.com.au)